

# A PERFECT CONNECTION: PAIR AND GO!

BMP 8500 - THE TRENCH ROLLER.



# BMP 8500: the trench roller.

1

## STABLE CONNECTION THANKS TO RADIO.

- Trouble-free operation even under difficult job site conditions
- Clear and secure pairing of remote control to machine
- All important functions at a glance thanks to clearly visible LEDs



2

## SIMPLE RADIO REMOTE EXCHANGE.

- Remote control unit easy to replace
- Pairing a replacement radio remote done in seconds
- Any remote can be used with any machine, increasing flexibility when a replacement is needed quickly



## **TELEMATICS - TRACK YOUR MACHINE'S STATUS.**

- As an option, the machine is just a mouse click away
- Monitor machine position and status, including error codes



4

## **FOR GREATER ON-SITE SAFETY.**

- BOMAG Operator Safety System (BOSS) reacts immediately
- Machine stops reliably if it comes too close to operator
- Visual signal warns operator of risk of machine tipping
- Manoeuvring out of danger zone then possible

# **5** YOU COULD HARDLY ASK FOR MORE CONVENIENCE.

- Battery charge status clearly visible on remote control display
- Remote control with two batteries
- Second battery can be charged while remote controls machine with the first
- Total runtime of both batteries: 35-40 hours







# **6** ECONOMIZER. COMPACTION CONTROL MADE EASY.

- Light strips show compaction progress
- System warns against over-compaction and grain breakage while identifying soft spots in the soil
- Reduces number of passes by up to 25%

# BETTER PROTECTION FOR LONGER SERVICE LIFE.

- Enclosed exciter housing prevents water and dirt from entering
- Rugged, well-thought-out design for tough everyday construction site operation
- Intelligent layout of hydraulic hoses minimises repairs and keeps service costs low

# **QUICKLY WIDENED FOR ALL TASKS.**

- Effortlessly widen or reduce working width from 610 mm to 850 mm
- Smooth drum optionally available

# www.bomag.com

Head Office / Hauptsitz:

BOMAG Hellerwald 56154 Boppard GERMANY

Tel. +49 6742 100-0 info@bomag.com

## BOMAG Maschinenhandelsgesellschaft m.b.H.

Klausenweg 654 2534 Alland AUSTRIA

Tel. +43 2258 20202 austria@bomag.com

### **BOMAG (CANADA), INC.**

2233 Argentia Road, East Tower Suites 302 Mississauga, ON, Canada

Tel. +1 800 782 6624 canada@bomag.com

#### **BOMAG (CHINA)**

Compaction Machinery Co. Ltd. No. 2808 West Huancheng Road Shanghai Comprehensive Industrial Zone (Fengxian) Shanghai 201401 CHINA

Tel. +86 21 33655566 china@bomag.com

# BOMA Equipment

Hong Kong LTD

Room 1003, 10/F Cham Centre 700, Castle Peak Road Kowloon HONG KONG Tel. +852 2721 6363 bomahk@bomag.com

#### **BOMAG France S.A.S.**

2, avenue du Général de Gaulle 91170 Viry-Châtillon FRANCE Tel. +33 1 69578600 france@bomag.com

#### **BOMAG (GREAT BRITAIN), LTD.**

Sheldon Way Larkfield, Aylesford Kent ME20 6SE GREAT BRITAIN Tel. +44 1622 716611 gb@bomag.com

#### **BOMAG Italia**

Via Roma 50 48011 Alfonsine ITALY

Tel. +39 0544 864235 italy@bomag.com

#### FAYAT BOMAG Polska Sp. z o.o.

UI. Szyszkowa 52 02-285 Warszawa POLAND Tel. +48 22 482 04 00 poland@bomag.com

#### **BOMAG APAC PTE LTD**

300 Beach Road The Concourse, #18-06 Singapore 199555 SINGAPORE Tel. +65 6 294 1277 singapore@bomag.com

#### **BOMAG Americas, Inc.**

125 Blue Granite Parkway Ridgeway SC 29130 U.S.A. Tel. +1 803 3370700 usa@bomag.com



